

SMART GUIDE

ZOOM H1

STEREO MICROPHONES



- MIC /LINE INPUT
- INPUT LEVEL CONTROL
- FAST FORWARD
- MARK / PLAY / PAUSE
- REWIND
- TRASH
- POWER / HOLD
- USB CONNECTION

RECORD BUTTON

FRONT VIEW

SMART GUIDE

HANDY RECORDER



STEREO MICROPHONES

• LO CUT FILTER
• AUTO LEVEL
• REC FORMAT

• TRIPOD CONNECTOR

BATTERY

USB CONNECTOR

BATTERY

BACK VIEW

1 2
3 4

SMART GUIDE



MICRO SD CARD SLOT

HEADPHONE VOLUME

HEADPHONE JACK

SIDE VIEW

SMART GUIDE

ZOOM H1 HANDY RECORDER

SETUP FOR MANUAL RECORDING

1. INSERT BATTERY AND MICRO SD CARD
2. SLIDE POWER SWITCH TO TURN ON
 - IF THE MICRO SD CARD IS NOT FORMATTED, PRESS THE RECORD BUTTON TO CONFIRM.
3. SET THE DATE AND TIME (OPTIONAL)
4. SWITCH OFF AUTO LEVEL
5. CHOOSE WAV REC FORMAT FOR EDITING
6. SELECT THE SAMPLE RATE AND BIT RATE
 - USE LO CUT FILTER TO REDUCE WIND NOISE
7. ADJUST THE RECORDING LEVELS
8. PRESS THE RECORD BUTTON TO START RECORDING
 - PRESS THE PLAY BUTTON TO HEAR THE RECORDINGS
9. TRANSFER RECORDINGS TO COMPUTER

SMART GUIDE

ZOOM H1 HANDY RECORDER

SETTING DATE AND TIME

- PRESS THE RECORD BUTTON WHILE TURNING ON RECORDER
- USE FF AND REW BUTTONS TO SET DATE. PRESS PLAY/PAUSE BUTTON TO MOVE TO NEXT VALUE
- PRESS RECORD BUTTON TO RETURN TO PREVIOUS VALUE
- PRESS PLAY/PAUSE AFTER LAST VALUE TO SET DATE

FORMATTING MICRO SD CARD

- IF CARD IS NOT FORMATTED, THE RECORDER WILL ASK TO FORMAT THE CARD. PRESS THE RECORD BUTTON TO CONFIRM.
- TO REFORMAT THE MICRO SD CARD, PRESS TRASH BUTTON WHILE TURNING ON THE RECORDER

5 6
7 8

SMART GUIDE

ZOOM H1 HANDY RECORDER

MICROPHONE POSITION

- HOLD MICROPHONE 4 FINGERS FROM CHIN



SMART GUIDE

ZOOM H1 HANDY RECORDER

TRANSFERRING RECORDINGS

- TURN OFF RECORDER
- CONNECT RECORDER TO COMPUTER WITH USB CABLE
- TURN ON RECORDER
- WAIT 10 SECONDS FOR SD CARD TO APPEAR ON COMPUTER
- COPY WAV FILES TO COMPUTER

SETTING SAMPLE AND BIT RATE

- USE THE FF AND REW BUTTONS TO CHOOSE RATE
- USE 48/24 FOR VIDEO EDITING
- USE 44/24 FOR AUDIO EDITING

SMART GUIDE

ZOOM H1 HANDY RECORDER

ADJUSTING RECORDING LEVELS

- START WITH LEVELS AT 50
- HOLD MICROPHONE 4 FINGERS FROM CHIN
- RECITE THE ALPHABET IN A NORMAL VOICE
- GOOD LEVELS ARE AT -12 ON THE VU METER



- USE HEADPHONES WHILE RECORDING, BUT BE CAREFUL OF NOT TO MAKE NOISE WITH THE HEADPHONE CABLE.